

LUCIDATO

APPLICATION INSTRUCTIONS
FROM THE POLISHED PLASTER COMPANY

TOOLS AND MATERIALS

- BRUSH AND ROLLER
- HAWK AND ITALIAN STEEL TROWEL
- MASKING TAPE
- S C PRIMER
- KEY COAT PLASTER
- LUCIDATO POLISHED PLASTER
- CLEARCOAT WAX

BEFORE YOU BEGIN

Make sure before you begin that all surfaces are clean and sound. Fill any holes and cracks then rub down to a smooth level finish. Sand and feather out any high spots. Mask all skirting boards and architraves and other details.

HINTS AND TIPS

- Always take care with preparation, the better the surface the better the finish will be.
- For an even pattern and sheen, when burnishing the final layer take care to give all areas of the wall the same amount of attention,
- Wet on wet final layer will give a more even coloured pattern.
- Dry on dry final layer will give more pattern and tonal effect.
- Dont apply too much wax, rub wax well not the surface and then buff with a clean cloth. A polishing machine can be used to finish off.

TOOLS AND MATERIALS CAN BE PURCHASED FROM OUR ONLINE STORE AT


WWW.POLISHEDPLASTERCOMPANY.CO.UK

WE ARE ALWAYS HAPPY TO HEAR YOUR COMMENTS, PLEASE MAIL US AT

INFO@POLISHEDPLASTERCOMPANY.CO.UK

STEP ONE

APPLY S.C PRIMER EVENLY WITH A BRUSH OR ROLLER .
THIN PRIMER WITH WATER UP TO 40% FOR DIFFICULT SURFACES LIKE GLOSS OR PLASTIC APPLY NEAT PRIMER.
MAKE SURE TO MASK ALL ARES FIRST.

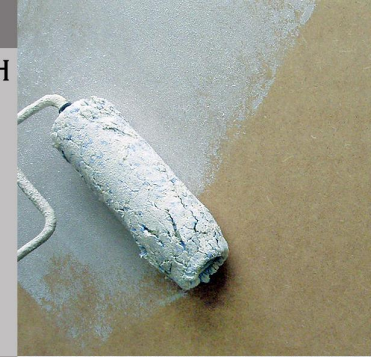


STEP TWO

APPLY AN EVEN LAYER OF KEY COAT BASE PLASTER TO ALL SURFACES. WORK THE KEY COAT INTO THE S C PRIMER AND TROWEL IN ALL DIRECTIONS. APPLY TO GRAIN THICKNESS AND AVOID THICK APPLICATION.



STEP THREE

APPLY LUCIDATO TO DRY OR FIRM BUT NOT WET KEY COAT PLASTER.
WORK LUCIDATO INTO THE KEY COAT TO CREATE A SMOOTH EVEN MATT FINISH. SOLVE ANY IMPERFECTIONS AT THIS STAGE BY SCRAPING OUT BITS OR HIGH POINTS. AVOID TROWEL LINES AND THICK APPLICATIONS.

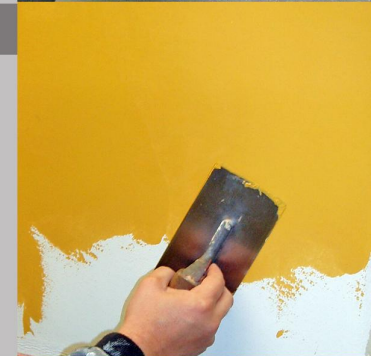

STEP FOUR

WHEN THE FIRST LAYER OF LUCIDATO HAS COMPLEATLEY DRIED YOU CAN APPLY THE SECOND LAYER OF LUCIDATO.
APPLY THIS LAYER IN PATCHES ACCORS THE SURFACE BUILDING UP AND CREATING PATTERN AS YOU GO.



STEP FIVE

THE LAST LAYER OF LUCIDATO IS APPLIED IN PATCHES OVER THE DRY OR FIRM LUCIDATO BURNISHING AS YOU GO. MAKE SURE TO BURNISH EVENLY WITH A CUTTING MOTION OVER THE DAMP PLASTER. BE SURE TO POLISH THE PLASTER BEFORE IT DRIES. THE PLASTER SHOULD HAVE A HIGH SHEEN FINISH WITH NO CLOUDY AREAS.



STEP SIX

LEAVE YOUR FINISH TO DRY OVER NIGHT BEFORE WAXING.
APPLY CLEAR-COAT WAX SPARINGLY WITH A CLEAN COTTON CLOTH IN A CIRCULAR MOTION.
BUFF UP WITH CLOTH AND THEN USE A MECHANICAL POLISHER IF REQUIRED.

